



Magic Light Brush

Pinceau magique

Pincel de Luz Mágica

 
Tips

- Protect work surfaces before starting.
- Between each color change, wipe off bristles with a dry paper towel.
- Snap on cover when not in use.


Battery Savers:

The Magic Light Brush will go into sleep mode after 5 minutes if unused. To reactivate, push power switch to "OFF" (0) position and then back to "ON" (1) position.


Get Started Easily!

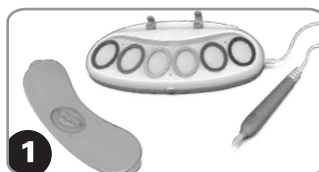

 Remove cover from unit and push power switch to "ON". Paint brush handle will light up and cycle through all colors.

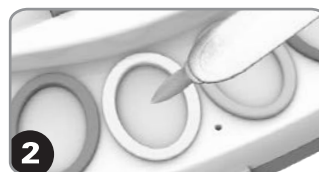

 Place the brush tip in the middle of the color pad. Handle will light up in the same color.

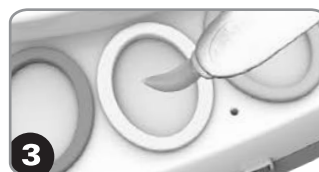

Stroke the bristles against the color pad. An invisible layer of paint will stick to the brush.



 
 
Brush onto Color Wonder Paper and watch colors magically appear!

Installing or Replacing Batteries

CAUTION: BATTERIES MUST BE INSTALLED BY AN ADULT ONLY. We recommend using non-rechargeable batteries.

REQUIREMENTS (not included): 3 AA Batteries, Phillips Screwdriver


1. Use Phillips screwdriver to loosen 2 battery cover screws under base. (Remove any used batteries and dispose of properly.)
2. Insert three (3) AA alkaline batteries. Ensure that direction matches diagram inside battery case.
3. Replace battery cover & tighten the screws.

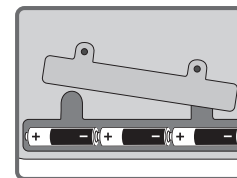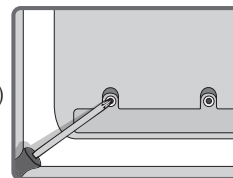

Cleanup

1. Push switch to "OFF" position.
2. Wipe off any paint or dirt from the base and brush handle with a damp cloth or sponge. **DO NOT IMMERSE THE UNIT IN WATER.**
3. Clean the bristles with a paper towel.
4. To store, snap the cover on to protect the color pads.
5. Push the brush cord into the cord clips on the back. Then snap Wand Unit into clips at the top of base.

 Contents • Comprend • Contenido

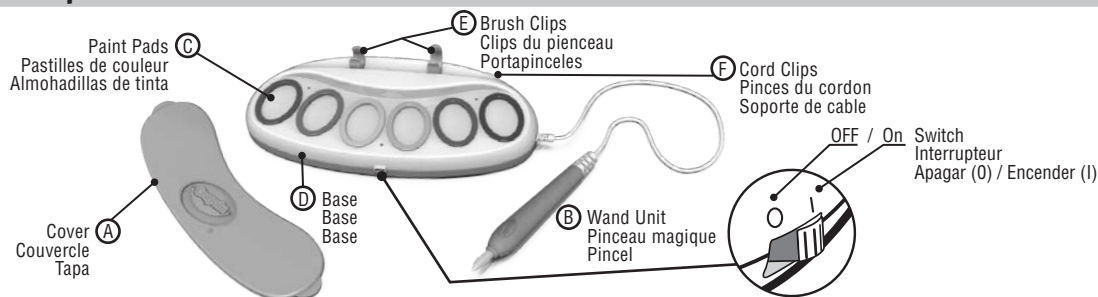

18 Blank Pages
18 pages blanches
18 Hojas en blanco

crayola.com

Code # / Code n° : / Código #: 75-7130-0-401

 
This Class B digital apparatus complies with Canadian ICES-003.

Crayola A Hallmark Company / Une société de Hallmark

©2025 CRAYOLA, EASTON, PA 18044-0431.

BINNEY & SMITH (EUROPE/EUROPA) LTD., BEDFORD HEIGHTS, MANTON LANE, BEDFORD, MK41 7PH, ENGLAND/ANGLETERRE/INGLATERRA; BINNEY & SMITH (EUROPE/EUROPA) LTD., VIA FIGLINE 13, 47122 FORLÌ (FC), ITALY/ITALIE/ITALIA. IMPORTED BY/IMPORTÉ PAR/IMPORTADO POR: CRAYOLA CANADA, LINDSAY, ON, K9V 2N5. DISTRIBUTED IN/DISTRIBUE EN/DISTRIBUIDO EN AUSTRALIA/AUSTRALIE BY/PAR/POR CRAYOLA (AUSTRALIA) PTY LTD, 10 CARIBBEAN DRIVE, SCORESBY VICTORIA 3179.

NO BATTERIES INCLUDED



CAUTION: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. **NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

WASHING & CARE INFORMATION

FOR BEST RESULTS: Color Wonder products use a colorless system that is invisible on most household surfaces. **After using Color Wonder, remove residue from hands by washing with soap and water. STAIN ADVISEMENT:** Color Wonder products may alter the appearance of some surfaces. To minimize any change in appearance, clean Color Wonder products off household surfaces immediately with soap and water. Keep away from wallpaper, painted walls, finished and unfinished wood, vinyl, leather and other materials that cannot be laundered. Do not hang finished art directly on porous surfaces like kitchen appliances, countertops, walls, and cabinets.

CAUTION: BATTERIES MUST BE INSTALLED BY AN ADULT ONLY.
We recommend using non-rechargeable batteries.

Contents and colors may vary. Keep instructions for future reference. All Crayola art materials are nontoxic.

BATTERY SPECIFICATIONS & CAUTIONS

Requires 3 AA batteries 4.5 V (DC). Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the toy before being charged. Non-rechargeable batteries are not to be recharged. Different types of batteries or new and used batteries are not to be mixed. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited.

